

Product: Pyrometer	Description GAUGE TESTING	Date Jan 03
Type: Electrical		Issue 1

1. Turn power supply to millivolts (mV)
2. Hook the red lead of the generator to the positive (+) terminal of the gauge
3. Hook the black lead of the generator to the negative (-) terminal of the gauge
4. Increase the millivolts (mV) to see the needle increase on the gauge
5. If the gauge needle does not move the gauge is defective.