

Product: Pyrometer	Description SENDER TESTING	Date Jan 03
Type: Electrical		Issue 1

1. Turn voltmeter to millivolts (mV)
2. Hook the red lead of the voltmeter to the red lead of the thermocouple.
3. Take the black lead of the voltmeter to the black lead of the thermocouple.
4. Take a flame to heat up the thermocouple at the compression ring.
5. The voltmeter should start to rise - if not the thermocouple is bad.